
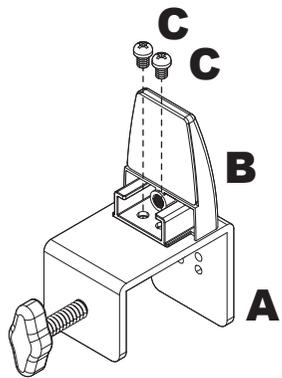
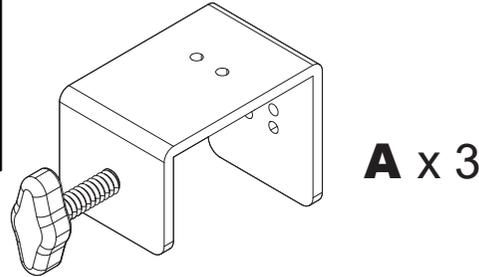
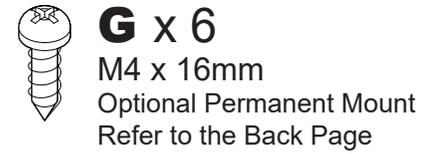
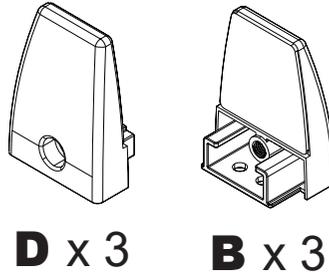



DIVWT 3 Clamp Wall Divider Panel Assembly Guide

Part List


Tools Needed:
Allen Wrench
(Included)
Screw Driver
(Not Included)

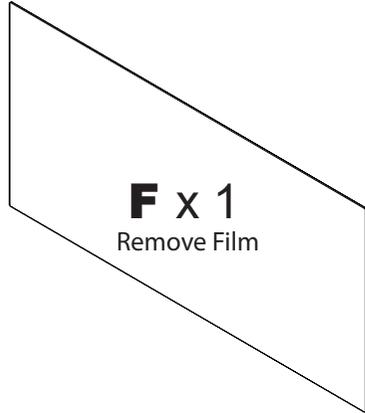


1 Attach B to A with Screws C

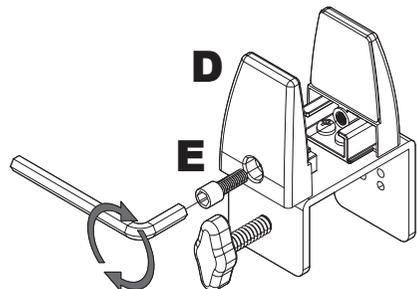

2 Attach D with Screw E

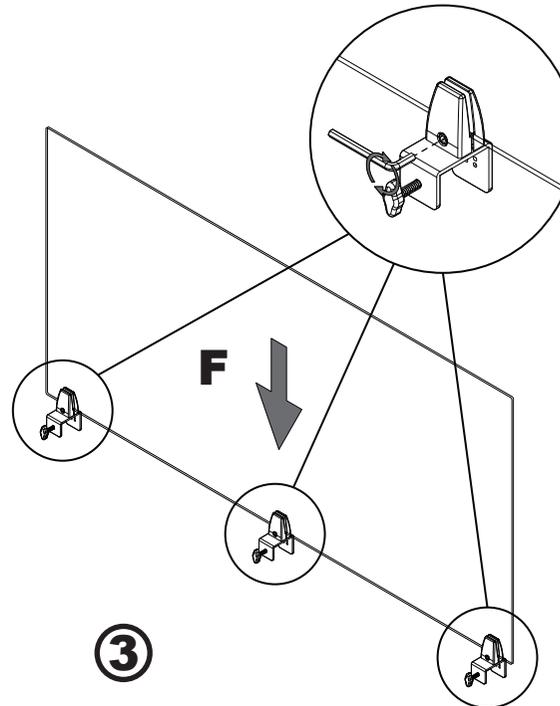

3 Install F into Assembled Clamps
Tighten Clamps


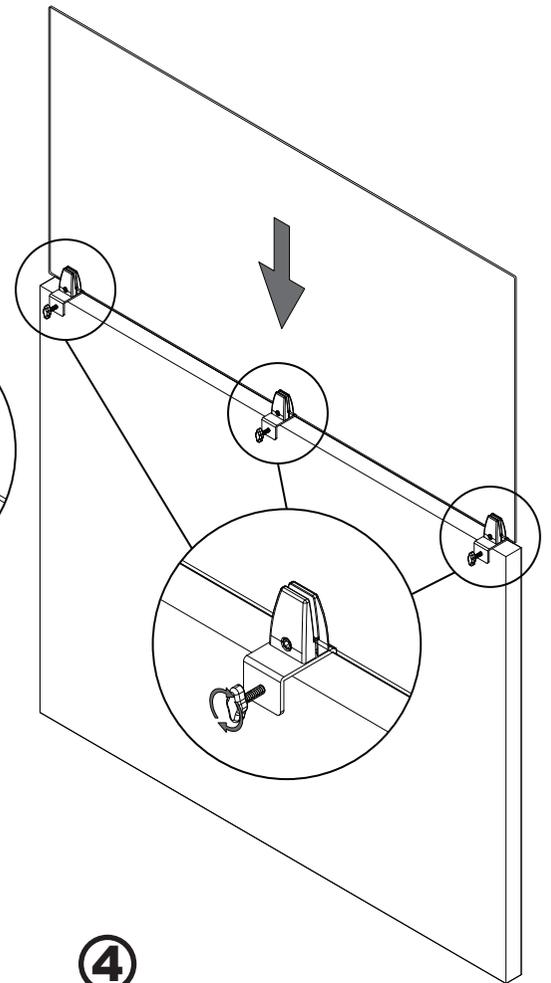


4 Install Divider Panel onto Wall
Tighten Clamps to Wall


DIVWT 3 Clamp Wall Divider Panel Assembly Guide

Optional Permanent Mount


Tools Needed:
Allen Wrench
(Included)
Screw Driver
Pencil
(Not Included)

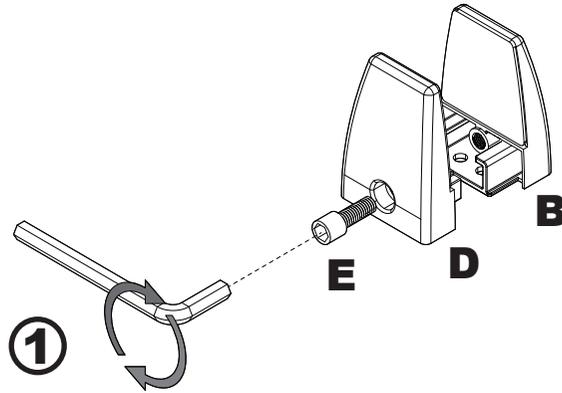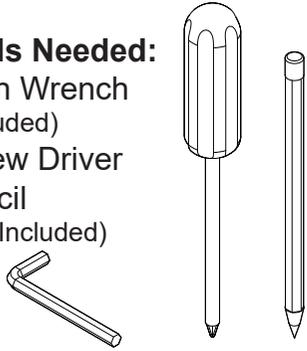


1 Attach D to B with Screw E

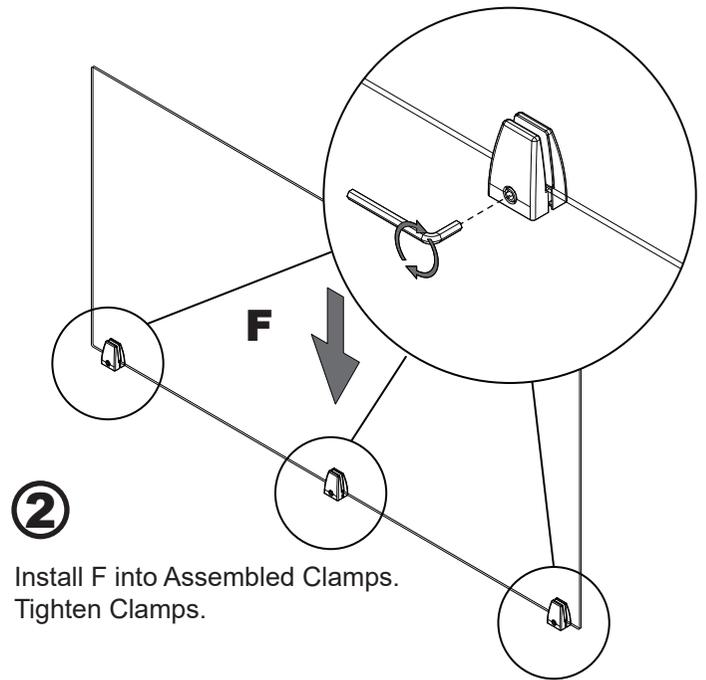


2 Install F into Assembled Clamps.
Tighten Clamps.

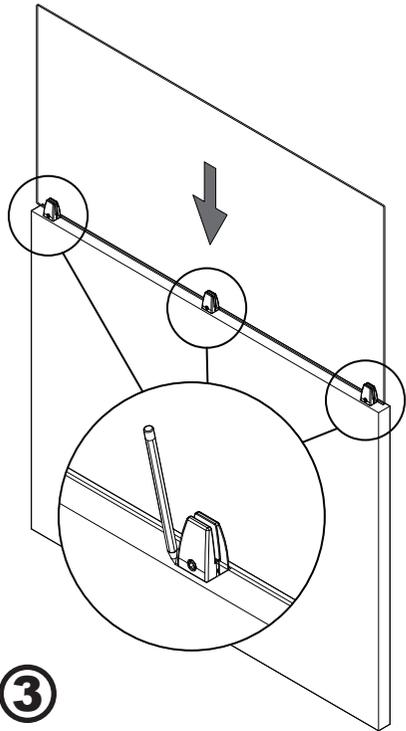

3 With Assistance - Place the Panel Assembly on the Wall and Outline the Clamps with a Pencil.

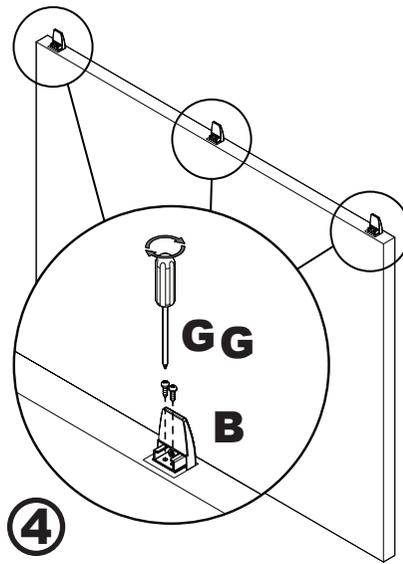

4 Remove and Disassemble the Panel Assembly. Place Part B on the Wall in the Outline Location and Secure with Screws G.

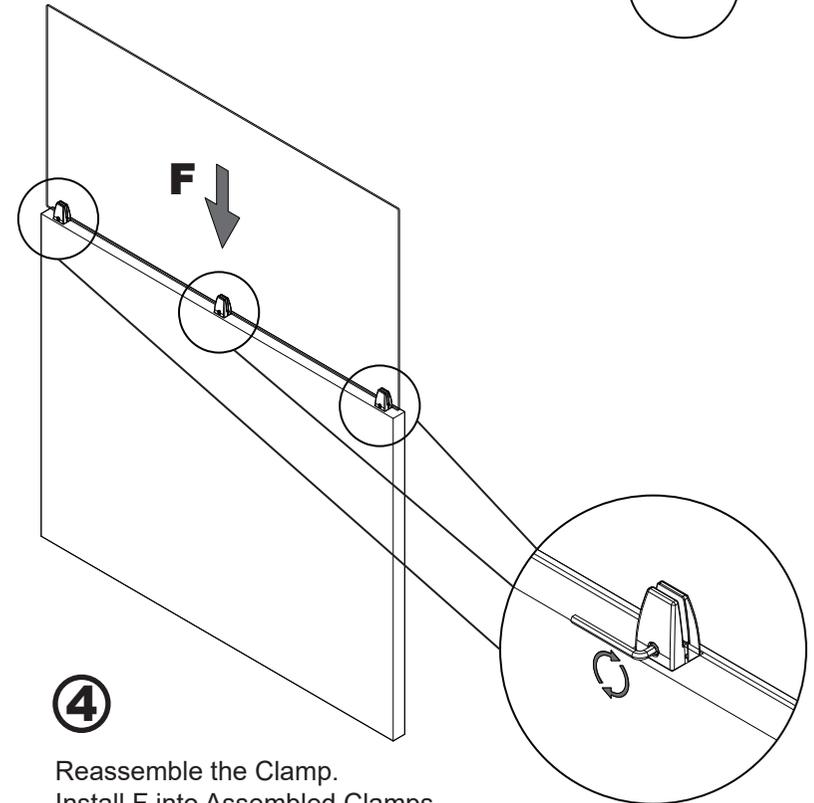

4 Reassemble the Clamp. Install F into Assembled Clamps. Tighten Clamps.