Assembly Instructions

Mobile Hygiene Shield MHS











in USA



Hardware & Part LIst

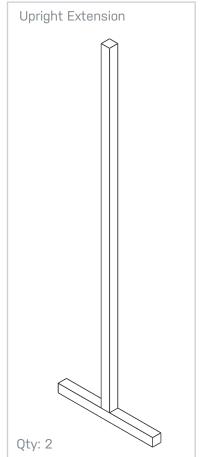


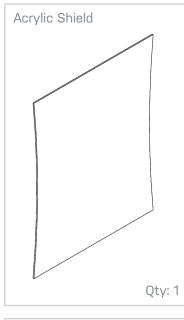





Hex Machine Screw

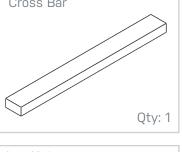


















Attach Casters to the Upright Externsion as shown, using the Jam Nuts to ensure Casters are level. Repeat this step on the other side.




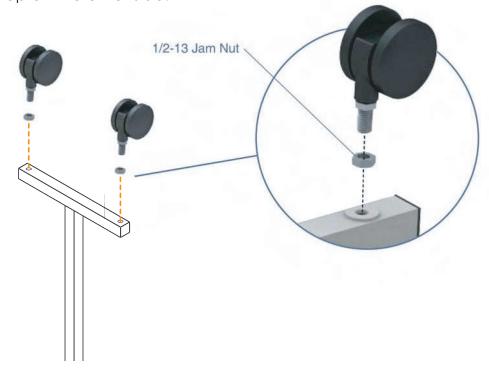

2

Attach the Cross Bar to the Upright extension by inserting the Hex Machine Screw through the Cross Bar and into the threaded inserts in the Upright Extension. Repeat this step on the other side.



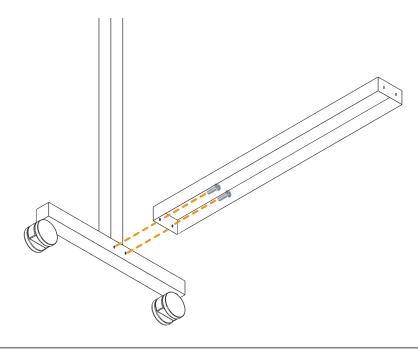







in USA




Assembly Instructions



Attach the Shield Brackets to the Upright extension by inserting the Phillips Bolts through the Shield Brackets and into the threaded inserts in the Upright Extension.




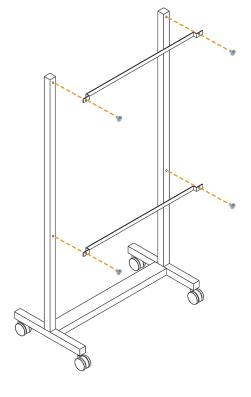



Attach the Acrylic Shield to the Shield Brackets by inserting the Phillips Bolts through the Acrylic Shield and Shield Brackets. Once in place, attach the Cap Nuts to the Phillips Bolts from the other side and tighten the Acrylic Shield in place.



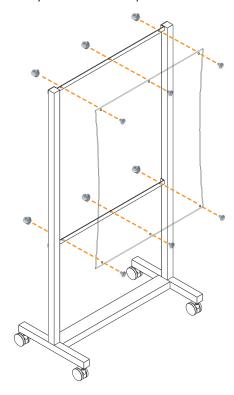







in USA

