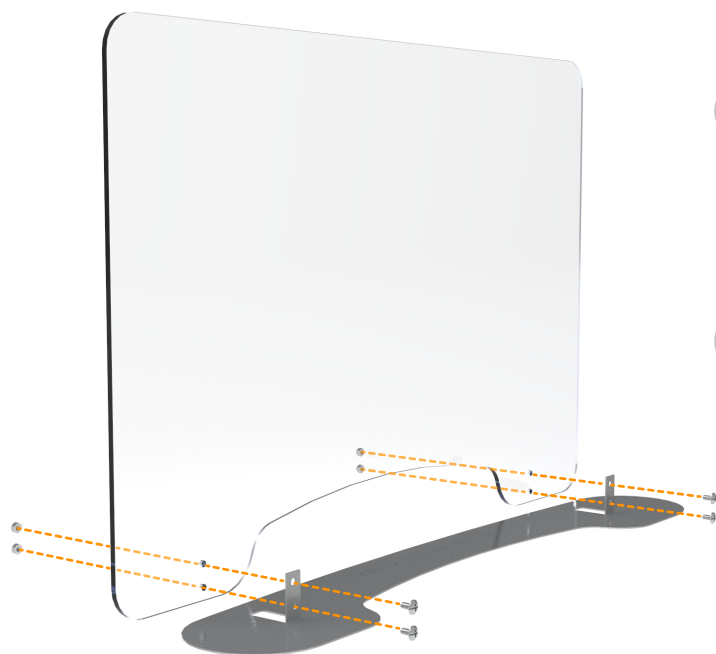


ASSEMBLY INSTRUCTIONS



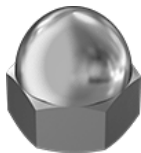

Sneeze Guard - Sheet Metal Base
Personal Protection Shield - **PPS-MB**

EXPLODED DIAGRAM



- 1 Remove protective cover from the Acrylic Panel and align hole pattern with the holes on the Base.
- 2 Insert Bolts through the Acrylic Panel and Base and fasten with Cap Nut.

PARTS

<p>Acrylic Panel</p>  <p>Qty: 1</p>	<p>Metal Base</p>  <p>Qty: 1</p>	<p>Cap Nut</p>  <p>Qty: 4</p>	<p>Carriage Bolt</p>  <p>Qty: 4</p>
---	---	--	---