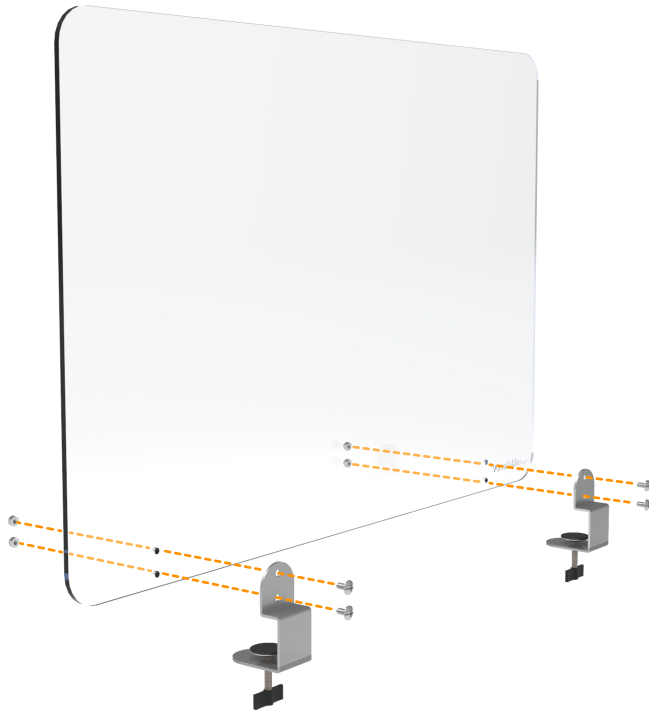


# ASSEMBLY INSTRUCTIONS



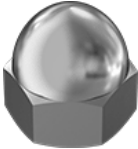

Sneeze Guard - Clamp Bracket  
Personal Protection Shield - **PPSC**

## EXPLODED DIAGRAM



- 1 Remove protective cover from the Acrylic Panel and align hole pattern with the holes on the Clamp Bracket.
- 2 Insert Bolts through the Acrylic Panel and Base and fasten with Cap Nut.

## PARTS

|   |  |  |   |
|---|--|--|---|
| <p>Acrylic Panel</p>  <p>Qty: 1</p> | <p>Clamp Bracket</p>  <p>Qty: 2</p> | <p>Cap Nut</p>  <p>Qty: 4</p> | <p>Carriage Bolt</p>  <p>Qty: 4</p> |
|---|--|--|---|