


# JOLLY TRIANGLE


## SET UP INSTRUCTIONS

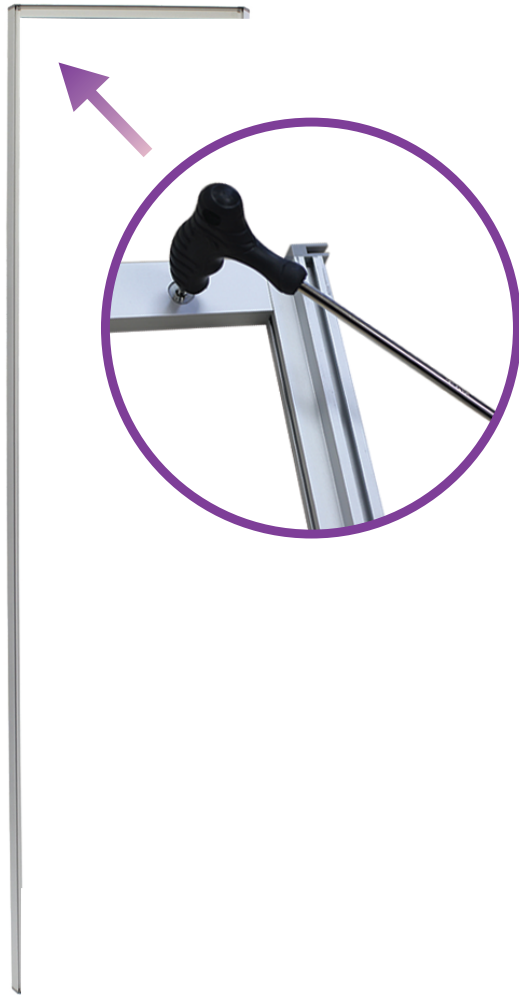

1. Start by lining up a horizontal extrusion with a vertical extrusion. Tighten the lock to secure the connection.



2. Repeat for other corner to complete 1 side of the triangle frame.

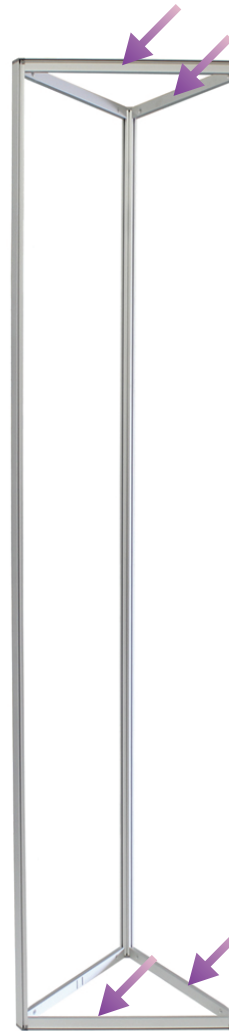

3. Attach the remaining horizontal extrusions to the vertical extrusions. Tighten all of the locks to secure their connection.



4. Attach the last vertical extrusion to the remaining horizontal extrusions. Double check all locks to make sure everything is fastened securely.