

BT-AFRAME

Instructions



1



2



3



4

**For Latia
2'x2' & 3'x3'**

2. Take out the parts of the frame from the bag.


3. Press the snap fastener to connect and lock the tube parts.

4. For 2x2 and 3x3 Latia, simply connect the L tubes & Straight tubes together.



5

**For Latia
2'x6' & 3'x6'**

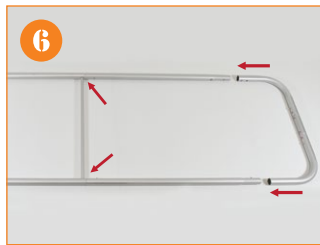

6



7



8

5. Connect 2 bungee corded Strait tubes with the tubes marked A, B, C, D first. Match the same letters on each end.

6. Insert the middle pole between two long tubes, and finish the panel with the other tubes marked E, F, G, H.

7. Install the pillowcase graphics by sliding in from one side.

8. Once the panel is fully covered, zip the end of the graphic.



9



10

9. Connect the base of the panels using the 2 bottom poles.

10. Connect the top of the panels using the 2 top connectors.



11

11. Completed Aframe stand.

