



PRODUCT DESCRIPTION

Modco[®] Modular Display 32 is a three-dimensional pre-designed backwall exhibit, ideal for a 20' booth space. Stylish and lively, this booth is built using tool-free perforated modular aluminum frames along with rounded corners. Multiple size frames connect using tool-less pin connectors making setup a breeze!

DISPLAY DIMENSIONS	234"W X 95"H X 39"D	
GRAPHIC SIZES	SIZE	QTY
	39"W x 96.25"H	4
	234" x 96.25"H	2
	TOTAL	6

GRAPHIC MATERIAL

Stretch Fabric w/ Integrated Block Out

GRAPHIC FINISHING

Silicone beading is sewn around the perimeter of the fabric graphic. Silicone beading is hidden from view once installed.

DISPLAY CONSTRUCTION

Aluminum frame and components

SHIPPING WEIGHTS & DIMENSIONS (FREIGHT ONLY)

Shipping Weight 3	893lbs w/	pallet
-------------------	-----------	--------


Shipping Dimensions	96"L x 40"W x 26"H	
Shipping Dimensions	JO L A TO W A ZO II	

GRAPHIC TURN AROUND TIME

4 business days after proof approval

AVAILABILITY PFC / PA



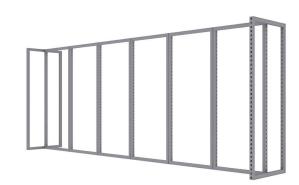






PARTS REFERENCE



Clamp Connector MOD-CLA-CON

Qty.10



T Connector MOD-T-90DCON Qty.4



180° Connector MOD-180D-CON Qty.10



992 x 2418 MOD-FRM-992x2418 Qty.8






Clip Connector MOD-CC Qty.12



Pin Connector MOD-PC Qty.32



INSTRUCTIONS

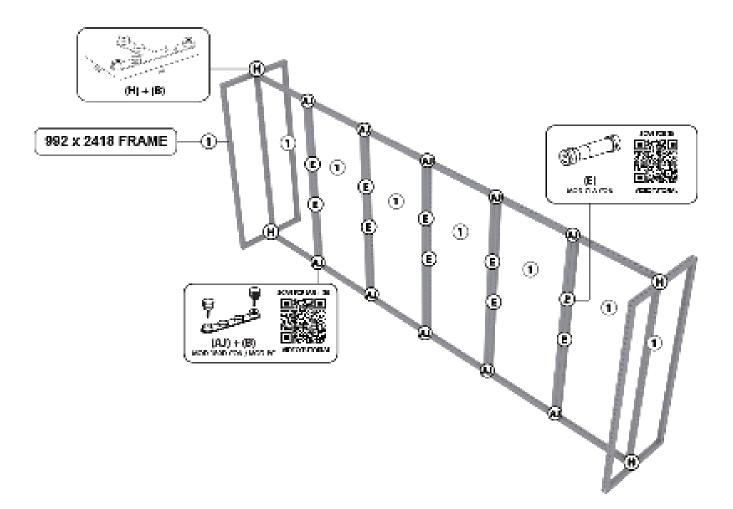


CONFIGURATION PARTS LIST			
КШ	QIY	PARENO.	DESCRIPTION
1	A	MODERM-992x2410	Straight I rame, Comer Screw Connect 992mm x 2410mm
L	10	MODICLA CON	Clamp Connector (additional 2 added)
A.I	10	MOD 1 80D CON	180 Degree Connecto (additional 2 added)
B-	- 32	MODHE	Pin Connector (additional 2 added)
- 11	4	MOD 1 90DCON	1 Shape 3 Way 90 Degree Connector (additional 2 added)

MODCO 32 - 20 X 10 MODCO MODULAR EXHIBITS PRODUCT CODE: MODCO32-20x10G



INSTRUCTIONS

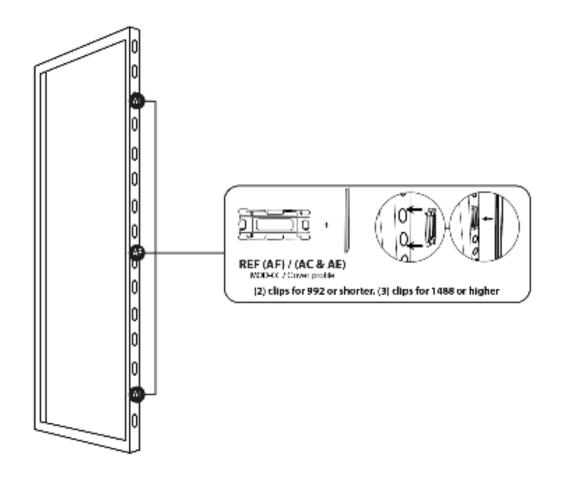

OOMER PHOTILES UST			
AC	4	MOD CP 9925(2418	Cover Profile for Lrame 992x2418. That Model, Anodized
AF	12	MOD CC	Cip Connector Cover Connects Cover Profile
Al	28	MODHIP	Modeo Forme Protector



GRAPHIC REFERENCES



Place graphic over the front of the frame.



Begin inserting SBG beading at each corner.



Insert the silcone beading with the fabric folded over the alloone beading should not be exposed.



Using your fingers, push both fabric and silicone beading completely into the extrusions channel.



Continue to push in the remaining siftcome beacing on each side.



Check the perimeter of the frame for any excess beading that have't been pushed in. Graphic should be taut.