



SEG Graphic Installation Guide

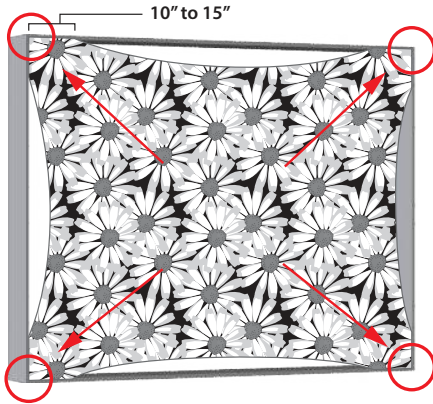

Step 1

Start on the 4 corners:


Insert the graphic edges to the frame on top left & right corners for at least 10"~15" long to secure the positions first. Repeat top steps for bottom left and right corners.

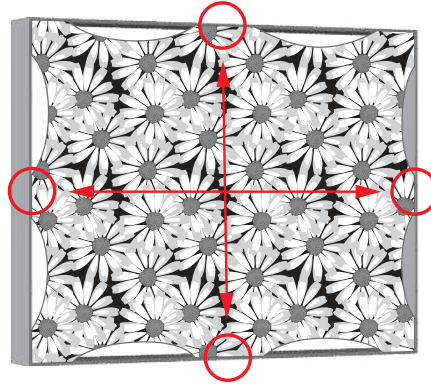

Step 2

Take care the centers:

Insert the middle edges of the graphic into each side of the frame.

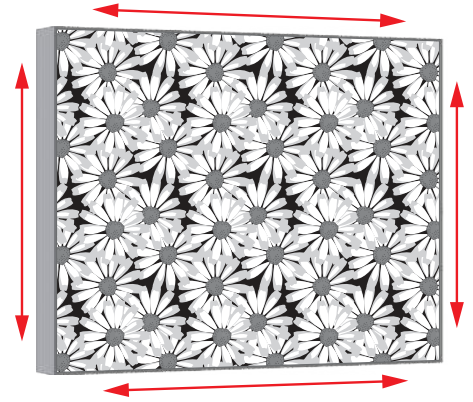

Step 3

Finishing the installation:

Insert the remaining graphic edges into the frame starting from the center toward to the corners.

Optional SEG Graphic Tucking Tool

The All New SEG Tucking Tool, helps assist with the proper tucking of the Silicon Edge to the frame and relieves any stress from your fingers!



ACC-SEG-TT

