


## PARTS GUIDE

Please remove all parts from the boxes and review them. Contact your service representative if there are any missing parts.

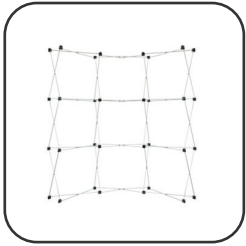

Frame



Hard Case Podium



Lights



Hanging Hardware kit



Magnetic Strip Roll



Channel Bars

## ADDITIONAL FRAME STYLES



10ft Big Wave Pop Up Displays



9ft Straight Pop Up Displays



16ft/20ft Big Wave Pop Up Displays



6ft/8ft Tabletop Pop Up Displays


## OPTIONAL ACCESSORIES



Pop Up LED



Hard Case Podium



Pop Up Shelves

# POP UP

## TRADESHOW DISPLAYS

---

## SET UP INSTRUCTIONS



8ft Big Wave Pop Up Display

## INSTALLATION STEPS


### Step 1

Remove the frame from the case. Place frame with the sliders for the the light on the top facing you.



### Step 4

Set up the channel bars to the frame. Start with the top of the frame. Insert the pointed end of the channel bar into the slot in the bracket at the top of the frame.

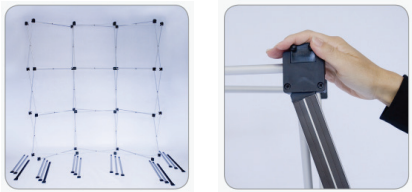

### Step 7

Carefully run your hands down the sides of the panel, attaching the magnetic strips to the channel bars and straightening as you go.




### Step 10

To attach the light, slide the bottom of the light to the light brackets on the top of the frame.



### Step 2

Grasp the upper ends of the frame and pull up and outwards. Continue pulling up and outwards until the frame is fully expanded.

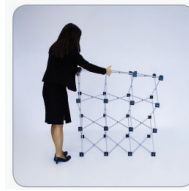


### Step 5

Slide the bottom of the channel bar from right to left onto the metal peg. Continue with the middle and lower channel bars.



### Step 8

Attach the Velcro of the bottom panel to the channel bar inserted to the frame.

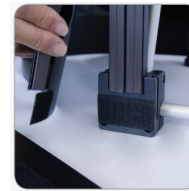


### Step 11

Wrap the panel for the podium and attach the edges to the velcro. Place the top lid on the top of the podium.




### Step 3

To close the frame, push from the outside of the frame until the male to female ends connect.

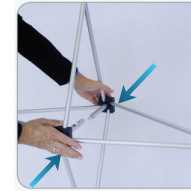

### Step 6

Lift the end panel and guide front notch of plastic plate over the front peg. Hook the other side on the panel peg at the back of the frame. Keep in mind that the center panels are wider than the end panels.

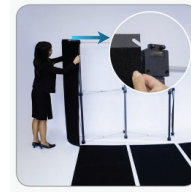


### Step 9

Lift sections and guide notches over the panel pegs on the top hubs. Slowly release the panel, allowing it to roll down the channel bars. Repeat for all center panels, aligning them as you go.



### Step 12

The installation is complete.

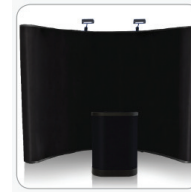

(2nd FOLD HERE)

(1st FOLD HERE)